

INSTRUCTION SHEET 233224 FOR FITTING DOUBLE STACKING KIT 233220 - (BAP85 / BACO35)



SERVICE WORK ONLY TO BE CARRIED OUT BY QUALIFIED PERSONS

Suitable for the following models:

BAP85 / BACO35

Contents:

ITEM	DESCRIPTION	Qty
A	DOUBLE STACK FRONT WA	1
B	DOUBLE STACK BACK	1
C	DOUBLE STACK SIDE	2
D	SCREW- 1"x 3/16" RAISED CSK	20

CAUTION:

Ensure unit is isolated from the electrical supply before commencing servicing.

A. UNPACKING

Check that the kit includes all the correct parts and correct quantities for the kit purchased as listed above.

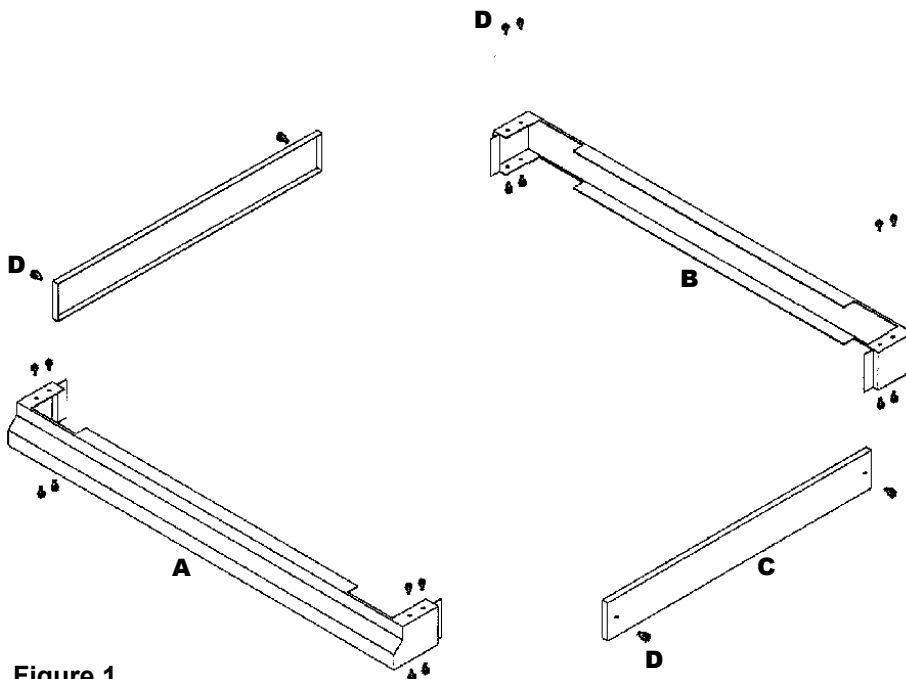


Figure 1

B. PROOFER (BOTTOM)

1. Remove side panels from proofer, each side panel is held on by 4 screws.
2. Remove rear RH side corner panel (power and water entry points), secured with 3 screws at front edge of panel (Figure 3).
3. Remove the 2 front top side panel support brackets, 2 screws each (Fig 2).
4. Remove the lid.

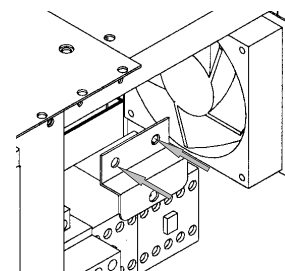


Figure 2

NOTE: The silicone sealant along the front of the lid will require cutting away. The lid is also sealed to the chassis top in the centre and accordingly it may be necessary to carefully pry the lid off to release the sealant in the centre.

C. STACKING KIT ASSEMBLY

1. Assemble loosely the front (A), back (B) and sides (C), with one screw (D) at each corner (Figure 1), in from the sides.
2. Place stacking assembly on top of the proofer and secure stacking kit front and rear (A & B) to the proofer, using 2 screws (D) in each corner of the unit (at front and back up from the sides).
3. Remove temporarily stacking kit side panels.

D. OVEN (TOP)

1. Remove side panels from oven, each side panel is held on by 4 screws.
2. Remove rear RH side corner panel (power and water entry points), secured with 3 screws at front edge of panel (Figure 3).
3. Remove the 2 front bottom side panel support brackets, 2 screws each.

E. STACKING

1. Remove legs / feet from oven and place onto proofer (on stacking assembly). Secure using 2 screws (D) in each corner of the unit (at front and back and down the sides).
2. Tighten all screws on the stacking assembly.
3. Refit stacking kit side panels.

F. RE-ASSEMBLY

1. Replace side cover support brackets (Figure 2) at top front of bottom unit and bottom front of top unit, using original screws.
2. Replace rear RH panel (Figure 3) on each unit using original screws.
3. Replace side panels, using original screws.

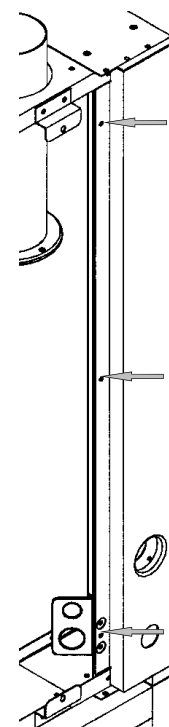


Figure 3